

Sensor Mounting

The optoNCDT 5500 sensor is an optical system for measurements with micrometer accuracy. Pay attention to careful handling during mounting and operation.

- Mount the sensor only to the existing through-holes (mounting holes) on a flat surface. Clamps of any kind are not permitted.
- Mount the sensor by means of 2 screws type M4 or by means of through bores for M3 with the screws from the accessories.

Measuring Range, Start of Measuring Range


Analog value		Digital value	
Current	Voltage	RS422	Ethernet
3 mA	5.2 V / 10.2 V	262077	0x7FFFFFFF05
			depends on measuring range
4 mA (MBA)	0 V	98232	Nanometer
12 mA (MBM)	2.5 V / 5 V	131000	Nanometer
20 mA (MBE)	5 V / 10 V	163768	Nanometer
			depends on measuring range
3 mA	5.2 V / 10.2 V	262078	0x7FFFFFFF06

e-SMR Start of extended measuring range
 SMR Start of measuring range
 MMR Mid of measuring range
 e-EMR End of extended measuring range
 e-MR Extended measuring range

The digital values apply to distance values without zeroing or mastering.


Mounting

Bolt connection

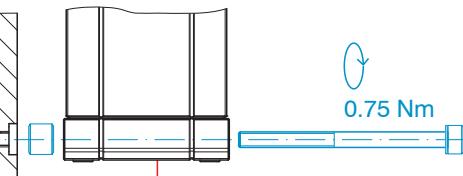


M3 x 40; ISO 4762, A2-70

Direct fastening

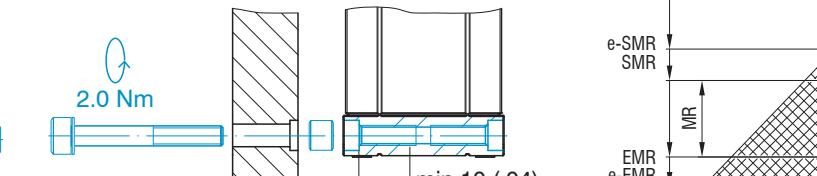


M4; ISO 4762, A2-70
 screw depth min. 10 mm

Drawings, Free Space

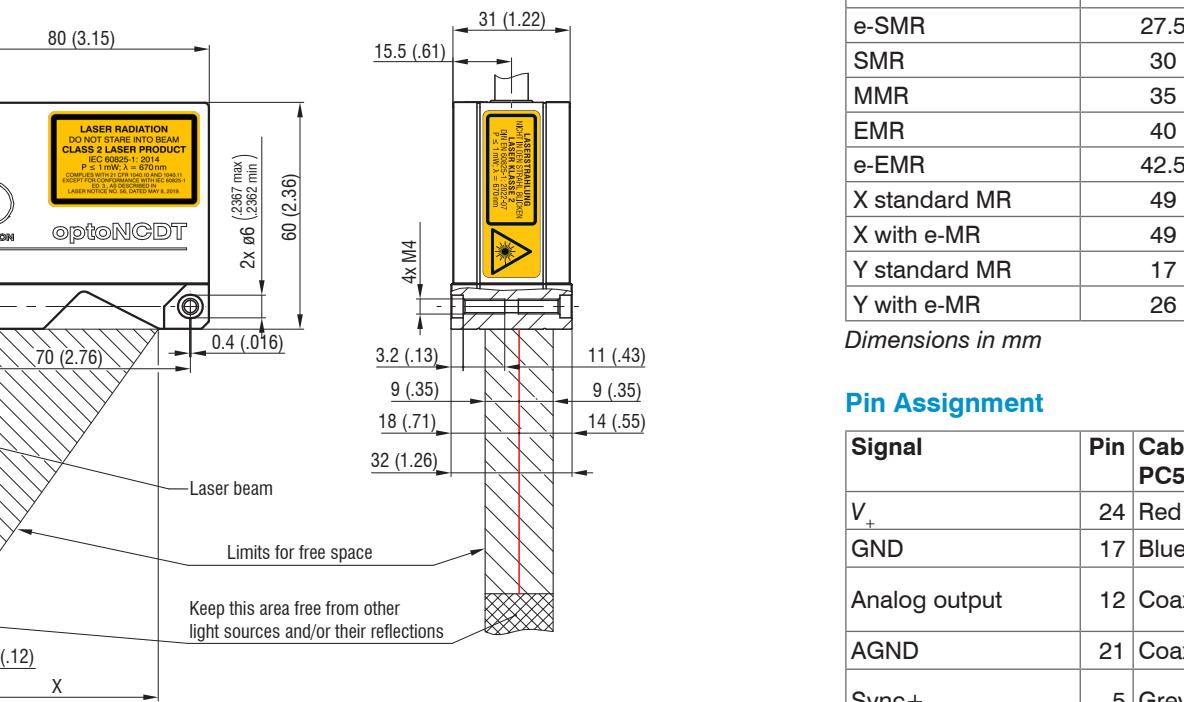

Dimensional drawing ILD5500-10/25/50, dimensions in mm (inches)

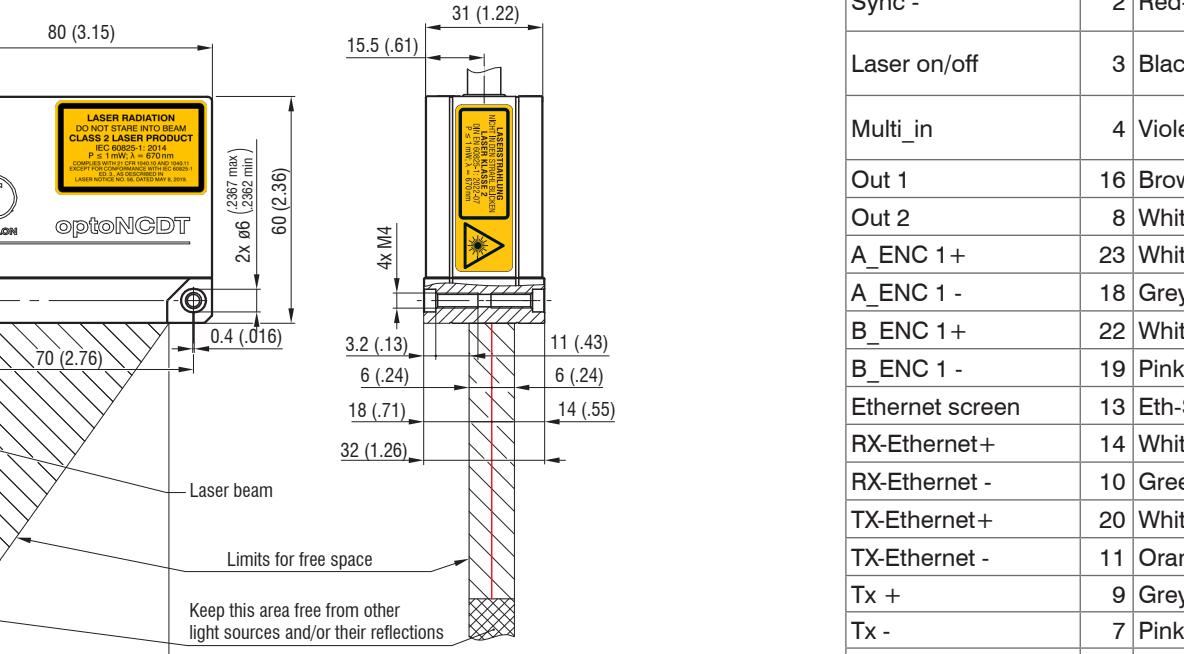

Dimensional drawing ILD5500-100/200, dimensions in mm (inches)

MB

MB	10	25	50	100	200
e-SMR	27.5	35	40	55	70
SMR	30	40	45	70	100
MMR	35	52.5	70	120	200
EMR	40	65	95	170	300
e-EMR	42.5	72.5	115	205	370
X standard MR	49	52	51	58	59
X with e-MR	49	53	52	59	60
Y standard MR	17	32	51	64	92
Y with e-MR	26	51	81	106	167

Dimensions in mm

Pin Assignment

Signal	Pin	Cable color PC5500-x	Description
V_+	24	Red	Supply voltage (12 ... 30 VDC), typically 24 VDC
GND	17	Blue	Reference ground for Power, Sync, RS422, Ethernet
Analog output	12	Coaxial	Current 4 ... 20 mA Voltage 0 ... 5 VDC 0 ... 10 VDC
AGND	21	Coaxial screen	Reference ground for analog output
Sync +	5	Grey-pink	Synchronization or Triggering; symmetrical RS422 level, terminating resistor (120 Ohm), direction can be switched using software, not electrically separated Alternative: reference pulse encoder input
Sync -	2	Red-blue	Switching output, Laser is active when pin 3 is connected to GND
Laser on/off	3	Black	Switching output for triggering, zeroing/mastering or teaching
Multi_in	4	Violet	Switching output for triggering, zeroing/mastering or teaching
Out 1	16	Brown	Switching outputs, programmable switching behavior: (NPN, PNP or push-pull)
Out 2	8	White	
A_ENC 1 +	23	White-grey	Encoder input Incremental signals A, B
A_ENC 1 -	18	Grey-brown	
B_ENC 1 +	22	White-pink	
B_ENC 1 -	19	Pink-brown	
Ethernet screen	13	Eth-Screen	
RX-Ethernet +	14	White-green	
RX-Ethernet -	10	Green	
TX-Ethernet +	20	White-orange	
TX-Ethernet -	11	Orange	
Tx +	9	Grey-black	Interface RS422 (32 Bit), symmetrical Rx internally terminated with 100 Ohm max. 4 MBaud, full duplex
Tx -	7	Pink-black	
Rx +	6	Green-black	not electrically separated
Rx -	1	Yellow-black	
Screen		SHLD	

True reproduction of the sensors with its actual location of the warning labels, class 2

- If both warning labels are covered over when the unit is installed, the user must ensure that supplementary labels are applied.

Operation of the laser is indicated visually by the LED State on the sensor.
 The housing of the optical sensors may only be opened by the manufacturer.

For repair and service purposes, the sensors must always be sent to the manufacturer.
 Please observe national regulations, e. g., Laser Notice No. 56 for the USA.

Laser Safety

The optoNCDT 5500 operates with a semiconductor laser with a wavelength of 670 nm (visible/red). The sensors fall within laser class 2. The laser is operated on a pulsed mode, the maximum optical power is ≤ 1 mW. The pulse frequency depends on the adjusted measuring rate (0.25 ... 5 kHz). The pulse duration of the peaks is regulated depending on the measuring rate and reflectivity of the target and can be 0.5 up to 399.5 μ s.

- Observe the national laser protection regulations.

Intended Use

The optoNCDT 5500 system is designed for use in industrial and laboratory areas. It is used for measuring displacement, distance and position as well as in-process quality control and dimension testing.

The sensor must only be operated within the limits specified in the technical data, see operating instructions. The sensor must be used in such a way that no persons are endangered or machines and other material goods are damaged in the event of malfunction or total failure of the sensor. Take additional precautions for safety and damage prevention for safety-related applications.

Warnings

Avoid unnecessary laser radiation to be exposed to the human body.

- Switch off the sensor for cleaning and maintenance.
- Switch off the sensor for system maintenance and repair if the sensor is integrated into a system.

Caution - use of control or adjustment or performance of procedures other than those specified may cause harm.

Connect the power supply according to the safety regulations for electrical equipment. The supply voltage must not exceed the specified limits.

- > Risk of injury, damage or destruction of the sensor.

Avoid constant exposure of the sensor to splashes of water. Avoid exposure of sensor to aggressive media (detergent, cooling emulsion).

- > Damage or destruction of the sensor.

Avoid shock and vibration to the sensor. Protect the sensor cable against damage.


- > Damage or destruction of the sensor, failure of the measuring device.

Proper Environment


- Protection class: IP67 (applies only when the sensor cable is plugged in)
 Optical inputs are excluded from protection class. Contamination leads to impairment or failure of the function.

- Temperature range
 - > Operation: 0 ... +50 °C (+32 ... +122 °F)
 - > Storage: -20 ... +70 °C (-4 ... +158 °F)


- Humidity: 5 ... 95 % (non-condensing)

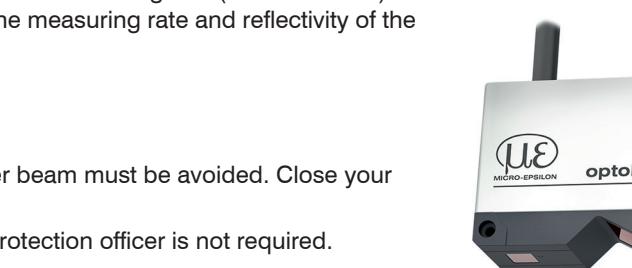

Supply voltage, Nominal value: 24 V DC (12 ... 30 V, $P < 5$ W)

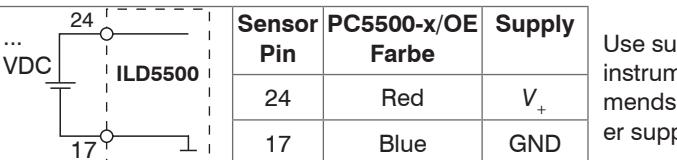


Switch on the Laser

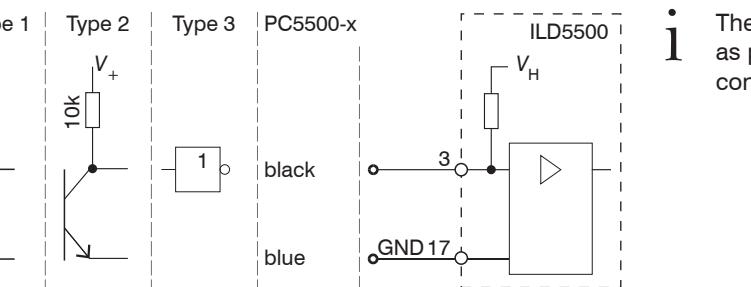


Analog Output

Current output 4 ... 20 mA or
Voltage output 0 ... 5 V or 0 ... 10 V

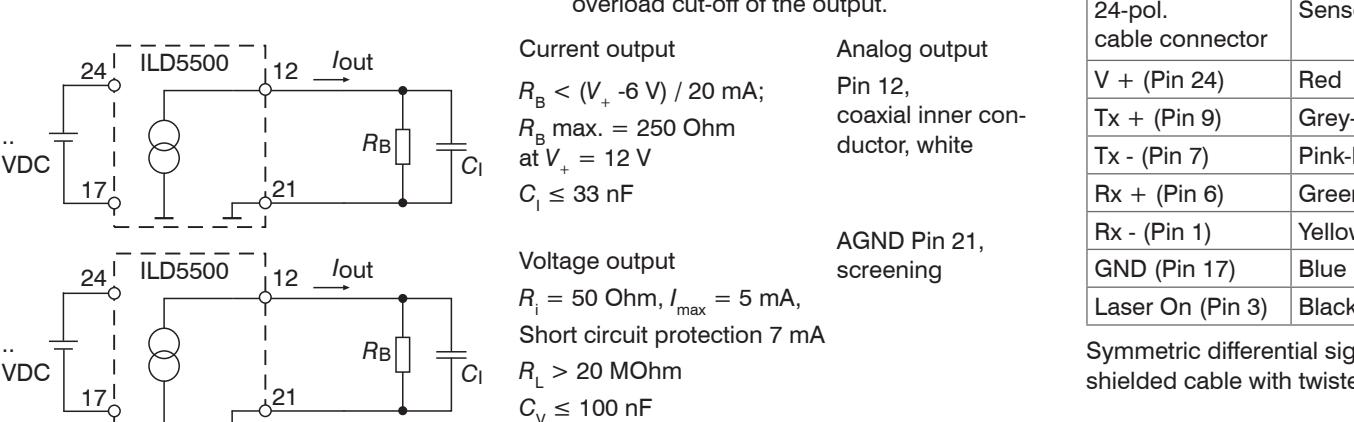


Connector and Sensor cable

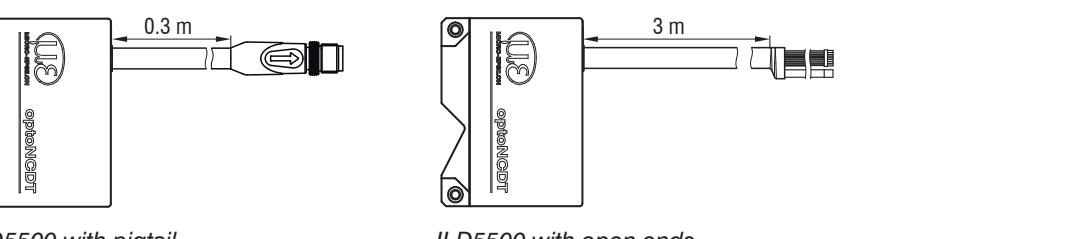

Unused open cable ends must be insulated to protect against short circuits or malfunction of the sensor.

Multi-Function Input

The multi-function input enables triggering, zero setting/mastering and teaching. The function depends on the programming of the input and on the timing of the input signal. The inputs are not electrically isolated. The maximum switching frequency is 10 kHz. (with symmetrical signals).

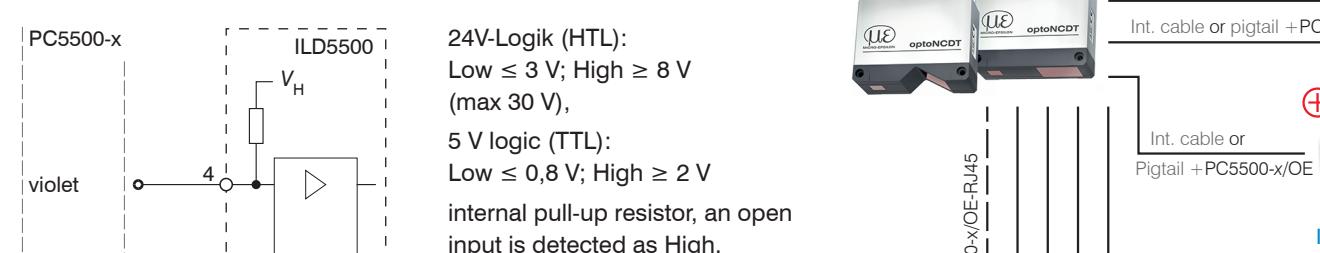


RS422 Connection with USB Converter IF2001/USB

E. g. for the connection between Sensor with integral cable and PC. Cross the lines for connections. Disconnect or connect the sensor and USB converter when the sensor is disconnected from power supply only.

Sensor		End device (converter) Type IF2001/USB from Micro-Epsilon
24-pol. cable connector	Sensor cable	
V+ (Pin 24)	Red	24VDC
Tx+ (Pin 9)	Grey-black	Rx+
Tx- (Pin 7)	Pink-black	Rx-
Rx+ (Pin 6)	Green-black	Tx+
Rx- (Pin 1)	Yellow-black	Tx-
GND (Pin 17)	Blue	GND
Laser On (Pin 3)	Black	Laser ON

Symmetric differential signals acc. to EIA-422, not electrically isolated from supply voltage. Use a shielded cable with twisted cores e.g. PC5500-3/OE-RJ45.


Ethernet Connection

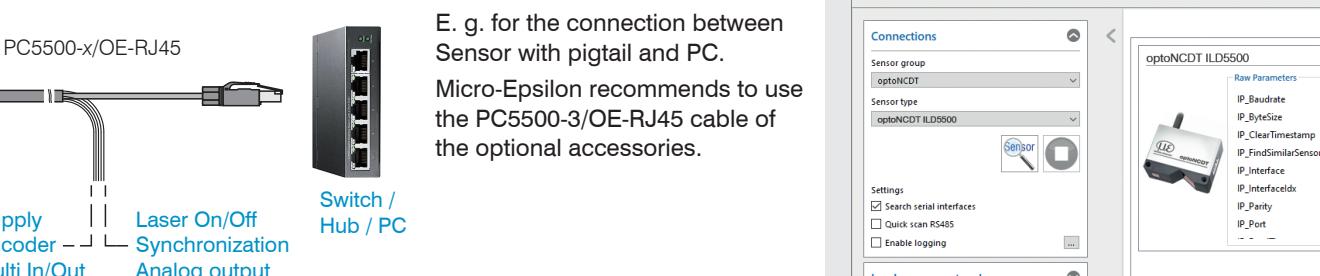

E. g. for the connection between Sensor with pigtail and PC. Micro-Epsilon recommends to use the PC5500-3/OE-RJ45 cable of the optional accessories.

Components

Mount the sensor and connect the components.

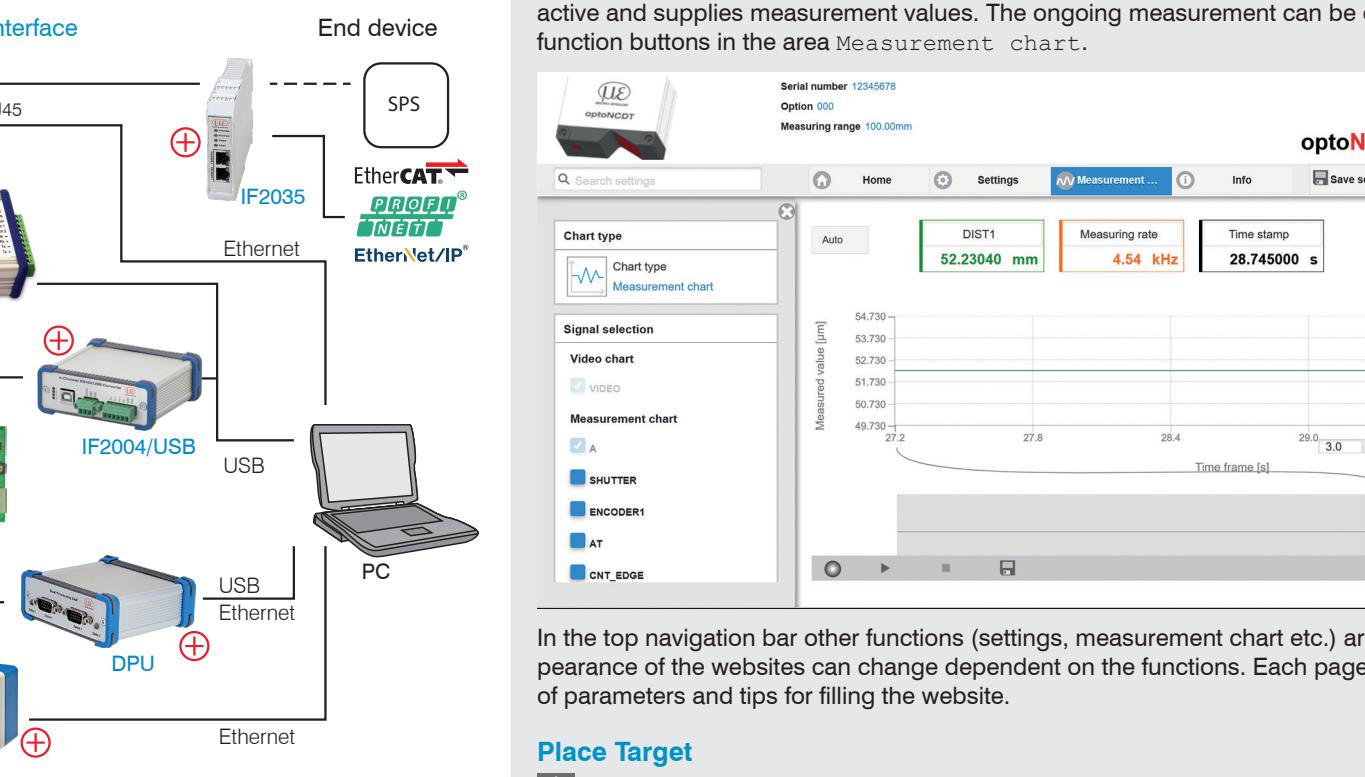


Sensor supply by peripheral device

Quick Guide

Initial Operation

- Connect the sensor to a PC/notebook via Ethernet or a RS422 connector. Connect the supply voltage.
- Start the program sensorTOOL.
- Click the Sensor button.

The program searches for connected ILD5500 sensors on available interfaces.

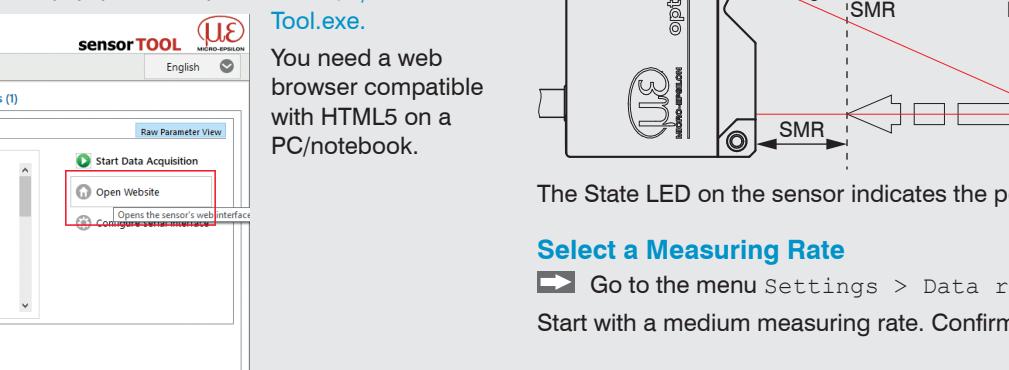

You need a web browser compatible with HTML5 on a PC/notebook.

The State LED on the sensor indicates the position of the target to the sensor.

Select a Measuring Rate

- Go to the menu Settings > Data recording > Measuring rate. Start with a medium measuring rate. Confirm with Apply.

Select the desired sensor. Click on the button Open Website.

Access via Web Interface


Interactive web pages for programming the sensor now appear in the web browser. The sensor is active and supplies measurement values. The ongoing measurement can be operated by means of function buttons in the area Measurement chart.



In the top navigation bar other functions (settings, measurement chart etc.) are available. The appearance of the websites can change dependent on the functions. Each page contains descriptions of parameters and tips for filling the website.

Place Target

Position the target (measuring object) as much as possible in the midrange.

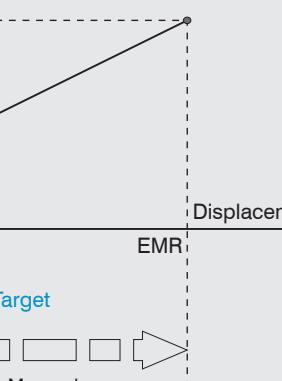

Target

Select a Interface

- Go to the menu Settings > Outputs > Output interface. Defines which interface is used for output of measured values. Parallel output of measured values via multiple channels is not possible. RS422, Ethernet and analog output can be operated simultaneously. While using the web interface, the output is switched off via RS422/Ethernet.

Select the Settings

- Go to the menu Settings > System settings > Load & Stores or click the Save settings button.


Read the detailed operating instructions before using the sensor. The manual is available online on: <https://www.micro-epsilon.com/download/manual-optoNCDT5500-en.pdf>



MICRO-EPSILON MEASUREMENTS GMBH & CO. KG
Koenigbacher Str. 5 • 9496 Oettingen/Germany
Tel. +49 (0) 842 161-0 • Fax +49 (0) 842 16-890
info@micro-epsilon.com • <https://www.micro-epsilon.com>
Your local contact: <https://www.micro-epsilon.com/contact/worldwide/>

Control and Indicator Elements

LED	Color	Meaning
Off	—	Laser beam is switched off
Green	—	Target within measuring range
Yellow	—	Target within midrange
Red	—	No distance value available, e.g. target outside the measuring range, too low reflection
Green	—	Measurement value output RS422 or Ethernet active, analog output off
Yellow	—	Switching output active RS422, Ethernet or analog output can be switched on. The web interface can be switched on.
Red	—	Measured value output current 4 ... 20 mA or Voltage 0 ... 5 V or 0 ... 10 V active
Off	—	Sensor off, no supply
—	—	Sensor parameterization during initialization Sensor selection of interface and key function (mastering or teaching) in measurement mode: selection of the sensor, averaging and measurement frequency functions
—	—	Sensor parameterization
—	—	Teaching or mastering

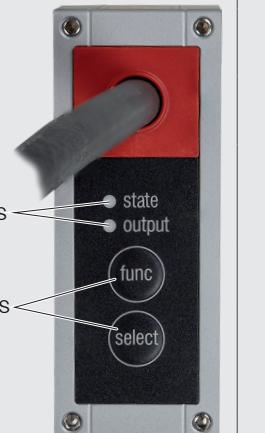

CE UKCA

957748-A01205B